



### $\Lambda$

### WARNIINGS

- This desk can only be used with the electric control system provided (This product must be powered on). All personnel responsible for the installation and maintenance of this table should read the instructions carefully.
- -This height adjustable desk has electric motors and is designed for use in dry work areas only.
- -The desk height is adjustable so that it can be positioned at the most ergonomically suitable height.
- -Any other use is at user's risk. Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused from improper use or handling of the desk frame.



### **TRANSPORTATION**

- Please handle with care and avoid products falling.

## $\triangle$

 
### **ASSEMBLY**

- Check package contents for completeness or damage before assembly.
- Check the product appearance and wire for obvious damage, do not install or operate products if damaged.
- Make sure the product is not connected to a power source during assembly.
- Ensure that there are no unnecessary obstacles near the assembly area.
- Ensure that personnel with limited knowledge to respond to hazards are not involved in the assembly process.
- Children are not allowed to participate in the assembly process to avoid accidentally swallow the installation parts.
- Do not immerse any components in liquid and clean only with a dry or slightly damp cloth.
- Do not place any wires under continuous heating source.
- Be careful not to trip over the wires and to prevent entanglement (between wires and wires, between wires and people).
- Please be careful to avoid electric shock when plugging in.


# $\triangle$

### USING

- Persons without permission (Children with limited knowledge to potential hazards, people affected by drugs, etc.)
  should not use, clean or maintain equipment without supervision.
- Don't sit or stand on the desk.
- -Do not open any of the components-the Legs, Control Box, or Switch. There is a danger of electric shock.
- -This product is designed with a duty cycle of 10% (2 min.on,18 min.off).
- -In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary-see USE section.
- Power the desk off first, and then go under the desk to fix the table top or clean it.
- Avoid injury caused by collision with desk corners.
- The desk should not be used in obstructed areas, such as under window edges, cabinets, etc. Please used the desk over 5cm away from the wall.
- When resetting the desk, please remove everything under the desk, such as chair, cabinet.
- Please adjust the height of the desk to the lowest and remove all things on the table top before moving the table.
- Children are not allowed to play with products as toys.
- After 1 week of use, check that the screws are properly tightened.
- Before first use, make sure all parts are properly assembled and connected.





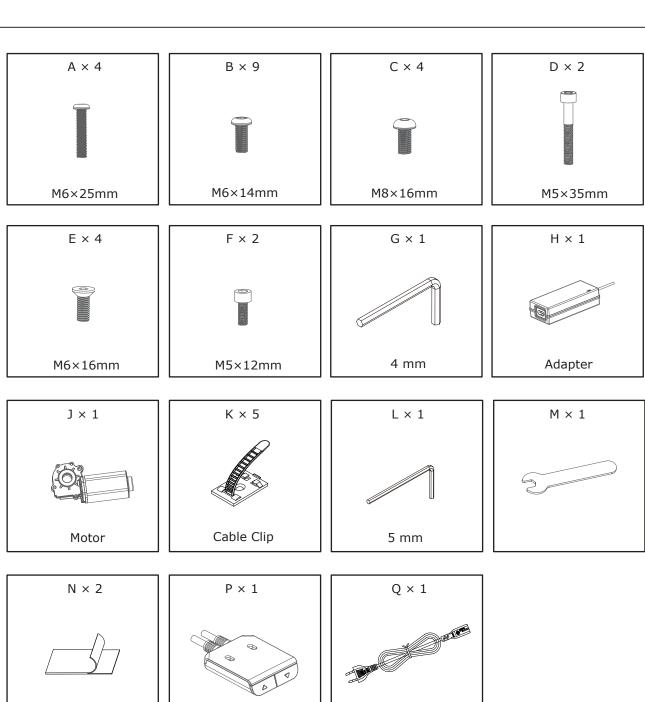

Control box

