
 


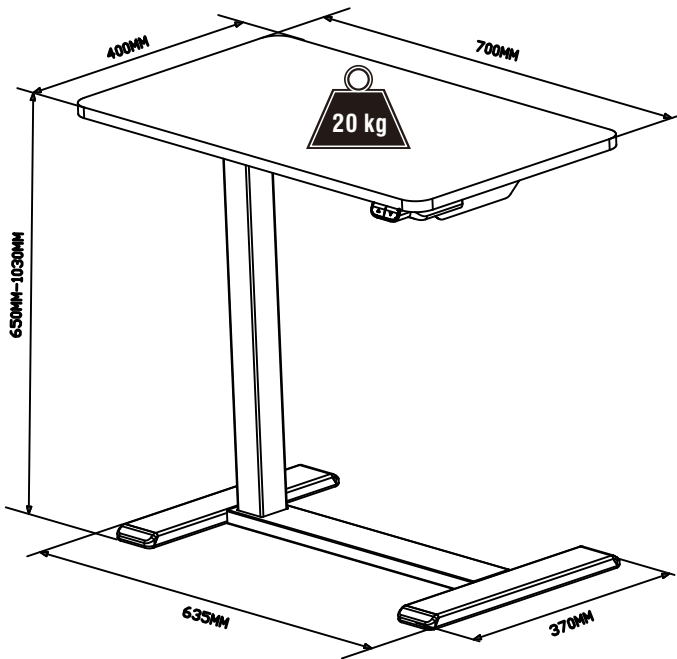

Item No. : **1811430-1**  
Installation guide



### Accessory list






Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact customer service if there are any missing tools or installation problems.


No.	Image	Spec	Qty
A		M6x16	8
B		Allen Key 4x4	1
C		Cable Tie	3

### Technical data

Column Stage	2
Column Design	Standard

### Component List

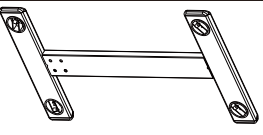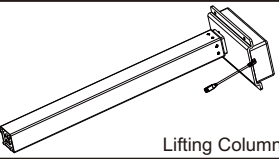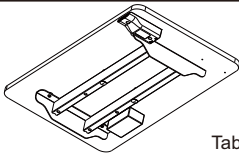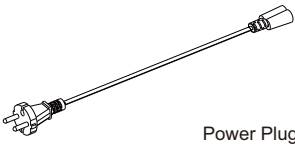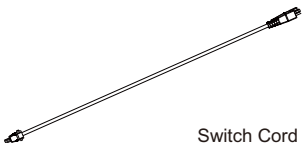No.	Part	Qty
①	 Base	1
②	 Lifting Column	1
③	 Tabletop	1
④	 Power Plug	1
⑤	 Switch Cord	1

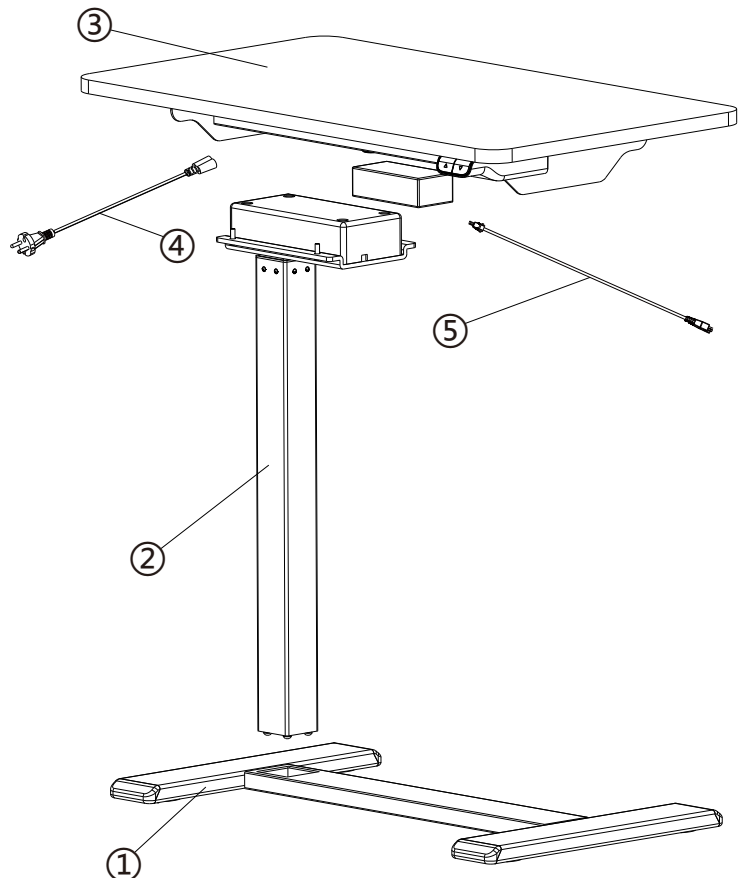


## STEP 1

Connect Lifting Columns and Tabletop

A x4  
M6x16

B x1  
4x4

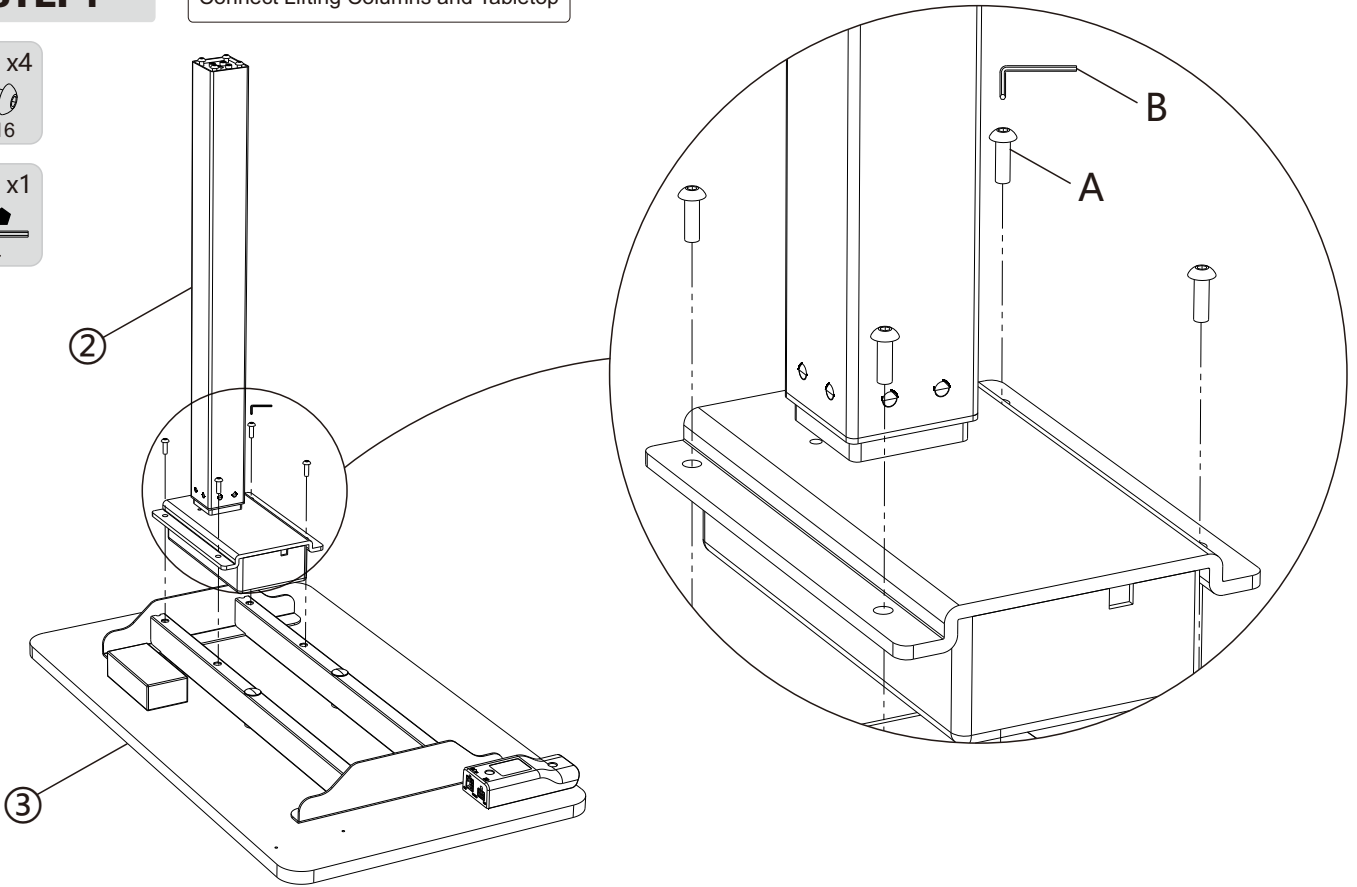


## STEP 2

Install Base


A x4  
M6x16

B x1  
4x4

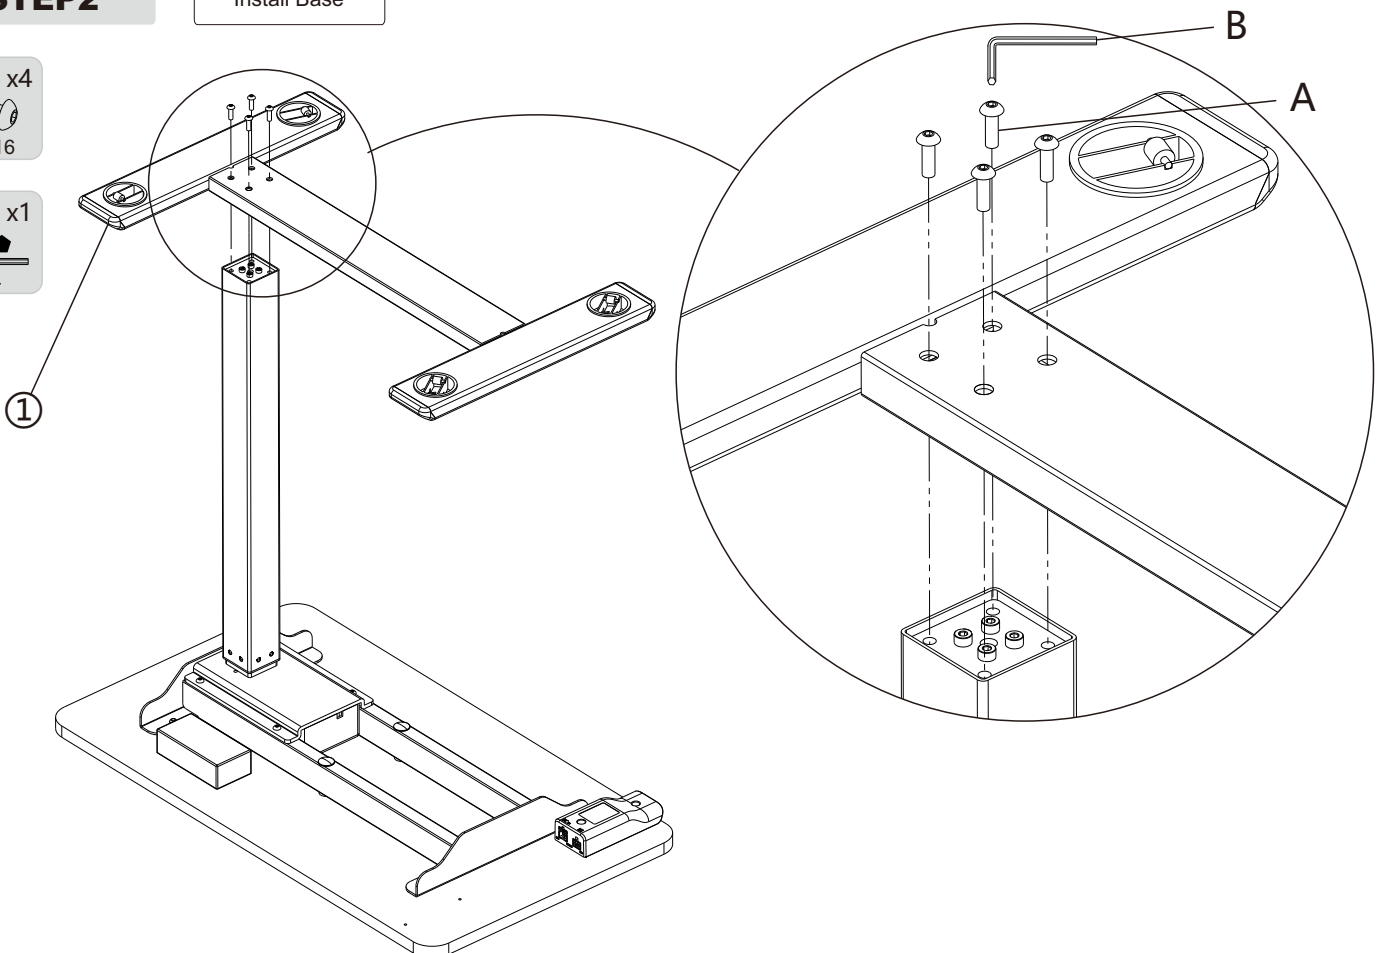

### STEP 3

Wire all Cables to Adapter

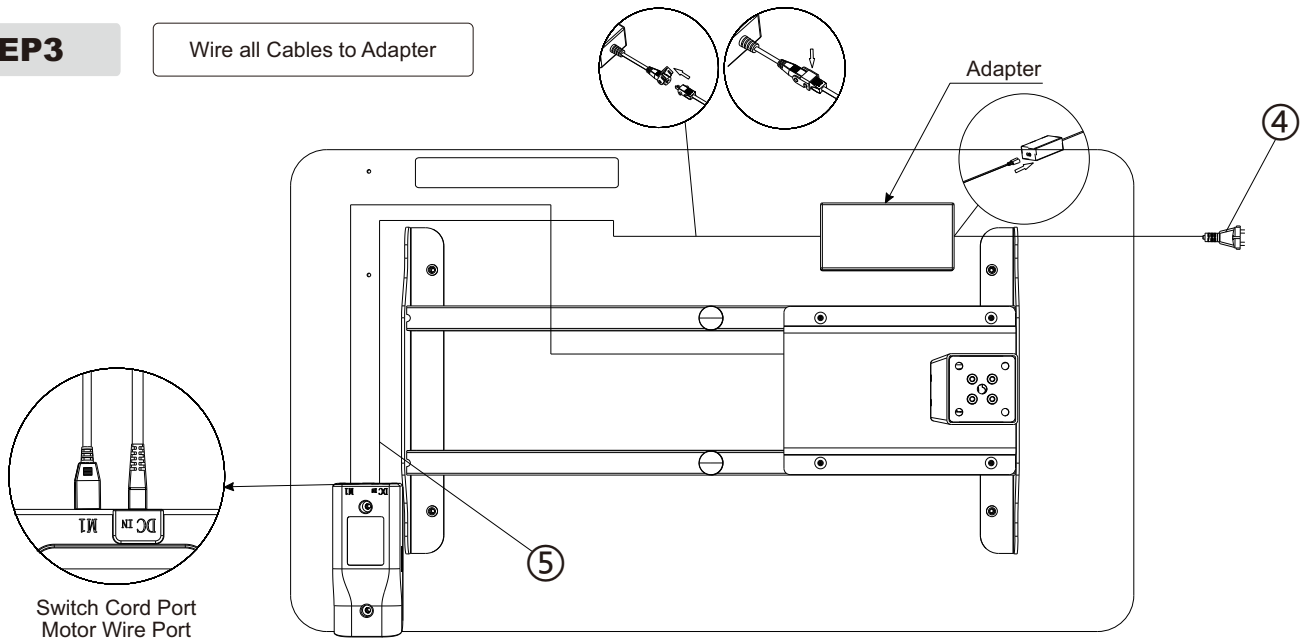

#### How to use handset

●	“▲”	Adjust the desk upwards
●	“▼”	Adjust the desk downwards

#### Operation


- **Button Lift Function**  
Press the “▲” or “▼” button to adjust the height of the desk.
- **Reset Function**
  - (1) When at the lowest position, long press the “▼” button for more than 5 seconds to enter the reset mode. The reset will be finished until the lift system rebound and stop after reaching the bottom.
  - (2) When the lifting system fails, release the button, long press the “▼” button, the reset will be finished until the lift system rebound and stop after reaching the bottom.
- **Fault Treatment**
  - (1) If there is no response when press the “▲” or “▼” button after working continuously for a period of time, please rest for more than 18 minutes before using again.

#### Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well 2.Contact your supplier or dealer
The desktop could not be lifted	1.Check if overloaded, max loading: 20kg 2.Contact your supplier or dealer
Overwork (Duty cycle:Max 2min on/18min OFF)	1.Restart it after suspend for 18mins for the working time is too long 2.Contact your supplier or dealer

#### Button

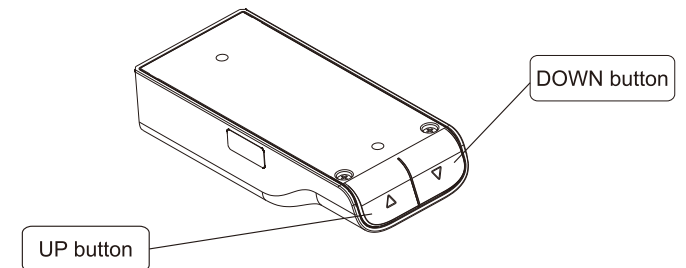

#### Attention

1. Power supply: AC100V-240V, 50/60Hz
2. Service Environment: 0-40 °C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
11. Keep the original package of the equipment if necessary in case of the future use in transportation.

#### Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Indoor Group Oy/SOTKA  
Kuninkaalantie 19  
01300 Vantaa FIN  
Finland